

aiwa


COMPACT DISC STEREO SYSTEM

LCX-133

OPERATING INSTRUCTIONS

WARNING


TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

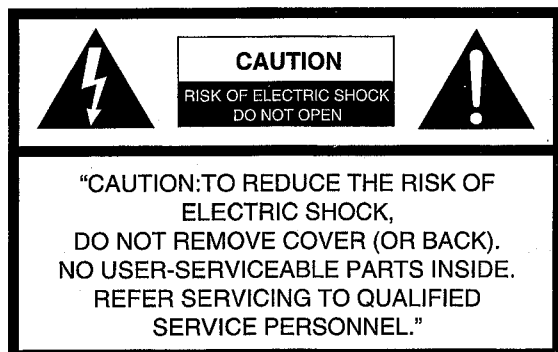

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This compact disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the exterior.

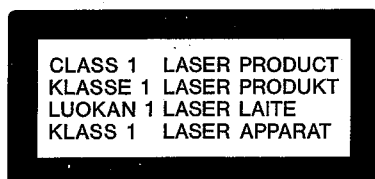

CAUTION!



Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam.

WARNING

This appliance is supplied with a fitted three pin mains plug. A 3 amp fuse is fitted in the plug. Should the fuse need to be replaced, use a 3 amp fuse approved by ASTA or BSI to BS1362. When replacing the fuse, you must ensure that any removable fuse covers are correctly refitted. If you should lose the fuse cover, please contact your nearest AIWA dealer.

DO NOT CUT OFF THE PLUG FROM THIS APPLIANCE. If the plug fitted is not suitable for the power points in your home, or the cable is too short to reach a power point, obtain an appropriate safety approved extension lead or adaptor. If in any doubt please consult a qualified electrician.

If the plug is cut off, remove the fuse and dispose of the plug immediately. **THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13 AMP SOCKET.**

If a new plug is to be fitted please ensure it contains a 3 amp fuse, otherwise the circuit should be protected by a 5 amp fuse at the distribution board.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

BLUE – NEUTRAL
BROWN – LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked by the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked by the letter L or coloured RED.

DO NOT connect either the BLUE or BROWN wires in the mains lead to the earth terminal (marked with the letter E or by the earth symbol \perp or coloured GREEN or GREEN/YELLOW) of a three pin plug.

PRECAUTIONS

Read the Operating Instructions carefully and completely before operating the unit. Be sure to keep the Operating Instructions for future reference. All warnings and cautions in the Operating Instructions and on the unit should be strictly followed, as well as the safety suggestions below.

Installation

- 1 **Water and moisture** – Do not use this unit near water, such as near a bath, sink, swimming pool, or the like.
- 2 **Heat** – Do not use this unit near sources of heat, including heating vents, stoves, or other appliances that generate heat. It also should not be placed in temperatures less than 5°C or greater than 35°C.
- 3 **Mounting surface** – Place the unit on a flat, even surface.
- 4 **Ventilation** – The unit should be situated with adequate space around it so that proper heat ventilation is assured. Allow 10 cm clearance from the rear and the top of the unit, and 5 cm from the each side.
 - Do not place the unit on a bed, rug, or similar surface that may block the ventilation openings.
 - Do not install the unit in a bookcase, cabinet, or airtight rack where ventilation may be impeded.
- 5 **Objects and liquid entry** – Take care that objects or liquids do not get inside the unit through the ventilation openings.
- 6 **Carts and stands** – When placed or mounted on a stand or cart, the unit should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit or cart to overturn or fall.
- 7 **Condensation** – Moisture may form on the CD pickup lens when:
 - The unit is moved from a cold spot to a warm spot
 - The heating system has just been turned on
 - The unit is used in a very humid room
 - The unit is cooled by an air conditioner
 When this unit has condensation inside, it may not function normally. Should this occur, leave the unit for a few hours, then try to operate again.
- 8 **Wall or ceiling mounting** – The unit should not be mounted on a wall or ceiling, unless specified in the Operating Instructions.

Electric Power

- 1 **Power sources** – Connect this unit only to power sources specified in the Operating Instructions, and as marked on the unit.
- 2 **AC power cord**
 - When disconnecting the AC power cord, pull it out by the AC power plug. Do not pull the cord itself.
 - Never handle the AC power plug with wet hands, as this could result in fire or shock.
 - Power cords should be firmly secured to avoid being severely bent, pinched, or walked upon. Pay particular attention to the cord from the unit to the power socket.
 - Avoid overloading AC power plugs and extension cords beyond their capacity, as this could result in fire or shock.
- 3 **When not in use** – Unplug the AC power cord from the AC socket if the unit will not be used for several months or more. When the cord is plugged in, a small amount of current continues to flow to the unit, even when the power is turned off.

Maintenance

Clean the unit only as recommended in the Operating Instructions.

Damage Requiring Service

Have the units serviced by a qualified service technician if:

- The AC power cord or plug has been damaged
- Foreign objects or liquid have got inside the unit
- The unit has been exposed to rain or water
- The unit does not seem to operate normally
- The unit exhibits a marked change in performance
- The unit has been dropped, or the cabinet has been damaged


DO NOT ATTEMPT TO SERVICE THE UNIT YOURSELF.

Welcome to the Aiwa Stereo System


Congratulations on your purchase of an Aiwa Stereo System. To optimize the performance of this system, please take the time to read through these Operating Instructions and become familiar with the operating procedures.

Check your system and accessories


LCX-133
Compact disc stereo system

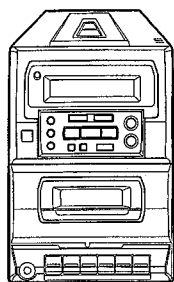


FM antenna

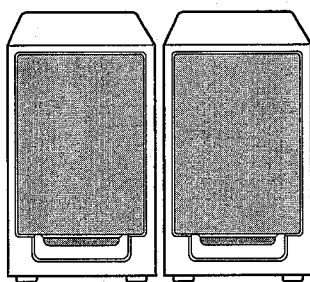

MW/LW antenna

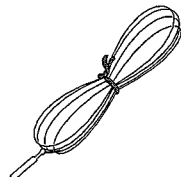

Remote control

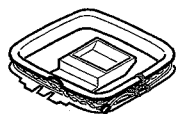

Operating Instructions, etc.



TABLE OF CONTENTS

PREPARATIONS

PRECAUTIONS	1
CONNECTIONS	3
BEFORE OPERATION	4

SOUND

ADJUSTING THE SOUND	5
---------------------------	---

RADIO RECEPTION

MANUAL TUNING	5
PRESETTING STATIONS	6

TAPE PLAYBACK

PLAYING A TAPE	6
----------------------	---

CD PLAYING

PLAYING A CD	7
--------------------	---

RECORDING

RECORDING	9
-----------------	---

CLOCK AND TIMER

SETTING THE CLOCK	9
SETTING THE TIMER	10
SETTING THE SLEEP TIMER	11

OTHER CONNECTIONS

CONNECTING OPTIONAL EQUIPMENT	11
-------------------------------------	----

GENERAL

CARE AND MAINTENANCE	12
SPECIFICATIONS	12
TROUBLESHOOTING GUIDE	13
PARTS INDEX	13

CONNECTIONS

Before connecting the AC cord


The rated voltage of your unit shown on the rear panel is 230 V AC. Check that the rated voltage matches your local voltage.

IMPORTANT

- Connect the speakers, antennas, and all optional equipment first. Then connect the AC cord in the end.
- There are no differences between the front speakers. Both speakers can be connected as L (Left) or R (Right).


1 Connect the speaker cords to the main unit.

The cords with the white stripes should be connected to the \oplus terminals and the other cords to the \ominus terminals.

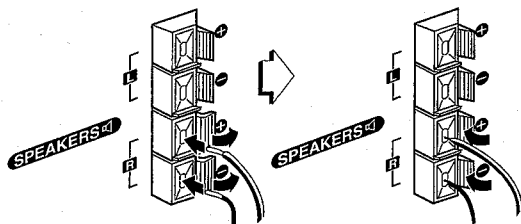

2 Connect the supplied antennas.



Connect the FM antenna to the FM 75 Ω terminal and the MW/LW antenna to the MW/LW LOOP terminals.

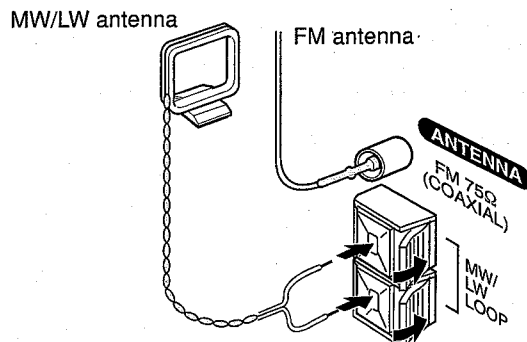

3 Connect the AC cord to an AC outlet.


NOTE

Do not short-circuit the \oplus and \ominus speaker cord leads; otherwise the sound may become inaudible. If this happens, disconnect the AC cord from the AC outlet and re-connect the speaker cord correctly. Connect then the AC cord and turn the unit on again.

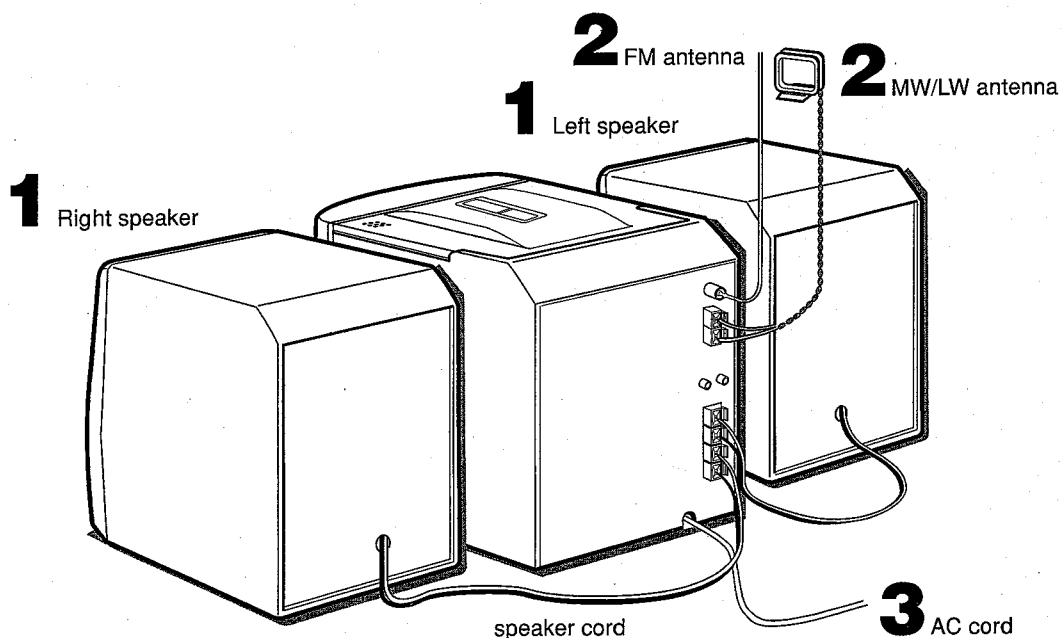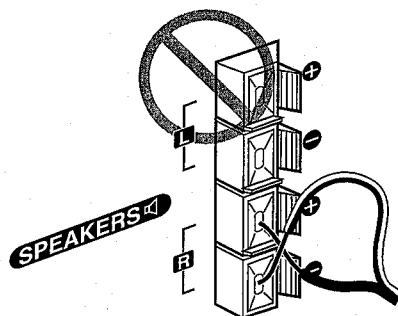

To stand the MW/LW antenna on a surface

Fix the claw to the slot.

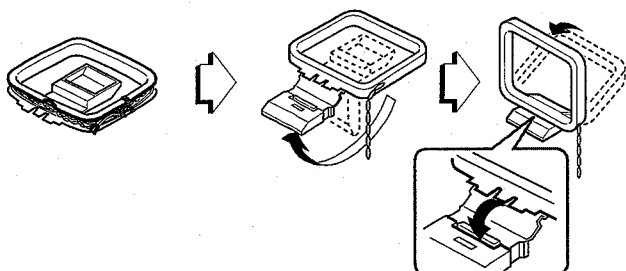

To position the antennas

FM unipolar antenna:

Extend fully and position for the best possible reception. This antenna is of an instant type, so the use of an outdoor antenna is recommended.

MW/LW antenna:

Position to find the best direction.


NOTE

- Do not leave objects generating magnetism near the speakers.
- Do not bring the FM antenna near metal objects or curtain rails.
- Do not bring the MW/LW antenna near other optional equipment, the stereo system itself, the AC cord or speaker cords, since noise will be picked up.
- Do not unwind the MW/LW antenna wire.

CONNECTING AN OUTDOOR ANTENNA


For better FM reception, use of an outdoor antenna is recommended.

Connect the outdoor antenna to the FM 75 Ω terminal.

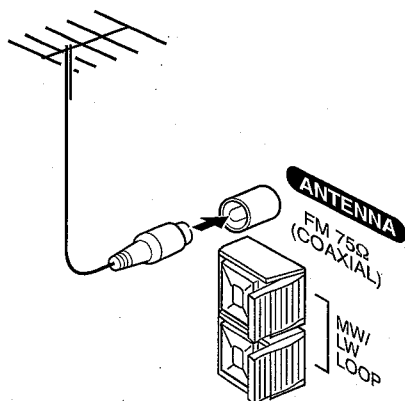

To connect other optional equipment → page 11.

BEFORE OPERATION

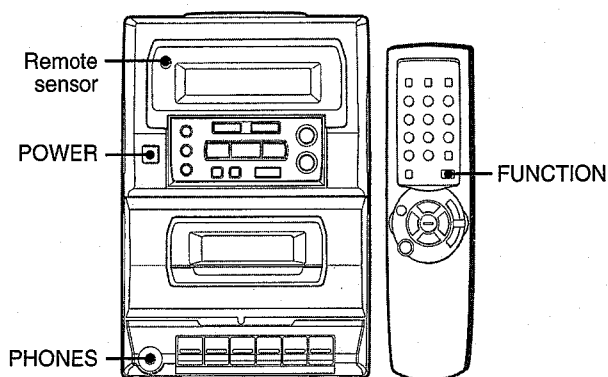

To turn the unit on

Press the POWER button.

After use

Press the POWER button to turn off the power. The display changes to the clock.

Using the headphones


Connect headphones to the PHONES jack with a stereo mini plug (ϕ 3.5 mm).

No sound is output from the speakers while the headphones are plugged in.

REMOTE CONTROL

Inserting batteries into the remote control

Detach the battery cover on the rear of the remote control and insert two R6 (size AA) batteries.

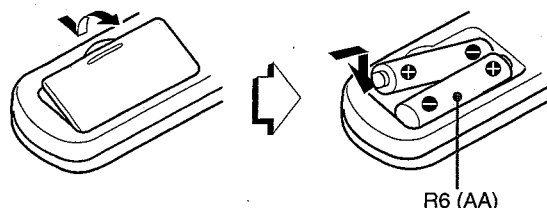

When to replace the batteries

The maximum operational distance between the remote control and the sensor on the main unit should be approximately 5 meters. When this distance decreases, replace the batteries with new ones.

To use FUNCTION button on the remote control


The FUNCTION button is used to choose the function (TAPE, TUNER, AUX, CD) on the main unit.

Each time FUNCTION button is pressed, the next function is selected cyclically.

NOTE

- If the unit is not going to be used for an extended period of time, remove the batteries to prevent possible electrolyte leakage.
- The remote control may not operate correctly when:
 - The line of sight between the remote control and the remote sensor is exposed to intense light, such as direct sunlight
 - Other remote controls are used nearby (television, etc.)

ADJUSTING THE SOUND

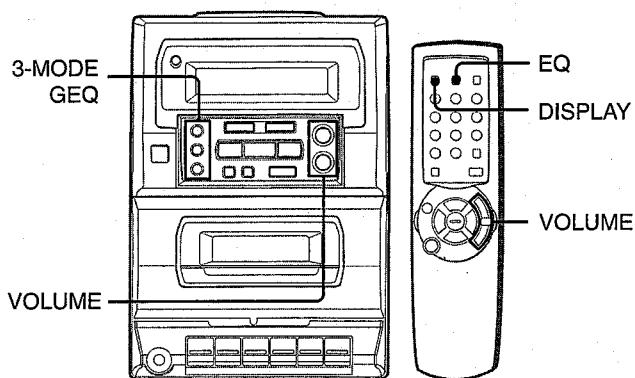

ADJUSTING THE VOLUME

Press the VOLUME control

Press ▲ button (or ^ on the remote control) to increase the volume, and ▼ button (or v on the remote control) to decrease it.


The volume level is shown on the display for 4 seconds. It can be set from 0 (minimum) to 30, and then MAX (maximum). The volume remains memorized even after the power is turned off. However, if the power is turned off when the volume is set to more than 20, it is automatically set to 20 the next time the power is turned on.

To display the current volume level

Press the DISPLAY button twice on the remote control. The volume level is displayed for 4 seconds.

GRAPHIC EQUALIZER

Press one of the 3-MODE GEQ buttons.

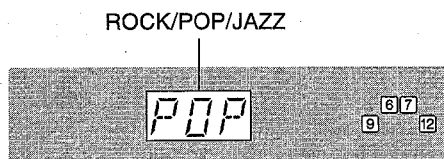

- ROCK:** Powerful sound emphasizing treble and bass.
- POP:** More presence in the vocals and midrange.
- JAZZ:** Sound enriched with heavy bass and fine treble.

To cancel the selected mode

Press the selected button again.


When using the remote control

Press the EQ button repeatedly until the desired equalization mode is displayed. The equalization mode changes to ROCK, POP, JAZZ or GEQ OFF (no equalization) cyclically.


SOUND ADJUSTMENT DURING RECORDING

The output volume and tone of the speakers or headphones may be freely varied without affecting the level of the recording.

MANUAL TUNING

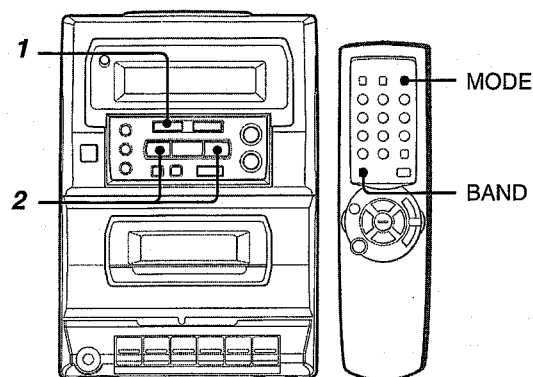


- 1 Press the TUNER/BAND button repeatedly to select the desired band.

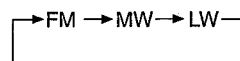

When using the remote control, press the BAND button repeatedly.

- 2 Press the ◀◀ or ▶▶ button to select a station.

Each time the button is pressed, the frequency changes. When a station is tuned in, "TUNE" is displayed for a moment. During FM stereo reception, "STEREO" is displayed.

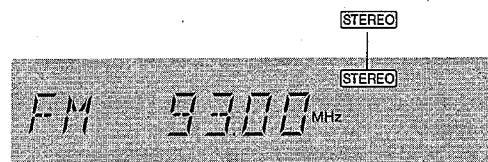

To turn on the unit and play a tuned station when the power is off (Direct Play Function)

Press the TUNER/BAND button. The power is turned on and the tuned station is played.

To search for a station quickly (Auto Search)

Keep the ◀◀ or ▶▶ button pressed until the tuner starts searching for a station. After tuning in to a station, the search stops.

To stop the Auto Search manually, press the ◀◀ or ▶▶ button.

- The Auto Search may not stop at stations with very weak signals.

When an FM stereo broadcast contains noise

Press the MODE button on the remote control.

"MONO" appears on the display.

Noise is reduced, although reception is monaural.

To restore stereo reception, repeat the above.

To change the MW tuning interval

The default setting of the MW tuning interval is 9 kHz/step. If you use this unit in an area where the frequency allocation system is 10 kHz/step, change the tuning interval.


Press the POWER button while pressing the TUNER/BAND button.

To reset the interval, repeat this procedure.

NOTE

When the MW tuning interval is changed, all preset stations (see "PRESETTING STATIONS") are cleared. The preset stations have to be set again.


PRESETTING STATIONS

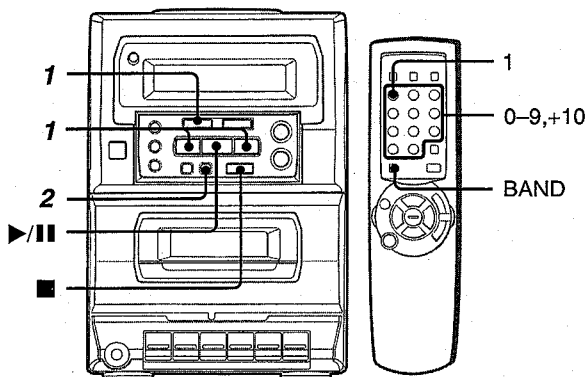

The unit can store a total of 32 preset stations. When a station is stored, a preset number is assigned to the station. Use the preset number to tune in to a preset station directly.

1 Press the TUNER/BAND button to select a band.
Then, press the ◀◀ or ▶▶ button to select a station.

2 Press the SET button to store the station.
A station is assigned a preset number, beginning from 1 in consecutive order for each band.

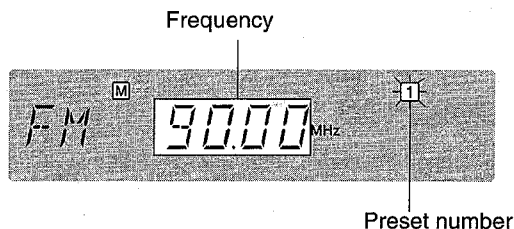

3 Repeat steps 1 and 2.

NOTE

Each band can only store a maximum of 16 preset stations.

To listen to preset stations

Use the remote control to select the preset number directly.

- 1 Press the BAND button to select a band.**
- 2 Press the numbered buttons to select a preset number.**

Example:

To select preset number 15, press the +10 and 5 buttons.

To select preset number 10, press the +10 and 0 buttons.

When operating on the main unit, press the ■ button repeatedly.

Each time the button is pressed, the next higher number is selected.

To clear a preset station


Select the preset number of the station to be cleared. Then, press the SET button, and press the ▶/■ button within 4 seconds while the frequency flashes.

The preset numbers of all other stations in the band with higher numbers are also decreased by one.

To scan preset stations


Press the "1" button on the remote control until "P-SCAN" is displayed. The preset stations are received in ascending order for 5 seconds each. To stop scanning, press one of the VOLUME buttons. The preset number flashes during reception.

PLAYING A TAPE

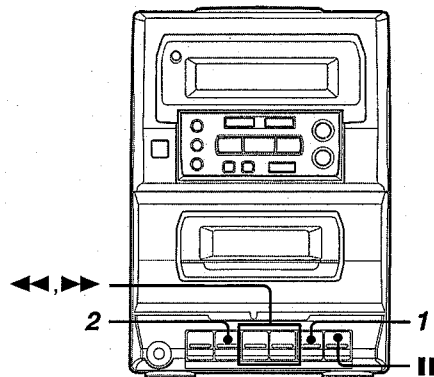

Use only type I (normal) tapes.

- 1 Press the ■/▲ button to open the cassette holder and insert a tape with the exposed side down. Push the cassette holder to close it.**

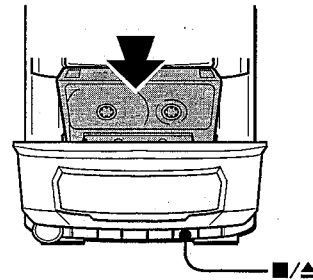

- 2 Press the ▶ button.**

TAPE function is selected and play begins.

Only the side facing out from the unit can be played back.

To stop play, press the ■/▲ button.

To pause play, press the ■ button. To resume play, press again.

To fast forward or rewind, press the ◀◀ or ▶▶ button in stop mode. Then press the ■/▲ button to stop the tape.


To start play when the power is off (Direct Play Function)

Press the ▶ button. The power is turned on and the inserted tape begins to play.

About cassette tapes


- **120-minute or longer tapes** are extremely thin and easily deformed or damaged. They are not recommended.
- **Take up any slack** in the tape with a pencil or similar tool before use. Slack tape may break or jam in the mechanism.

PLAYING A CD

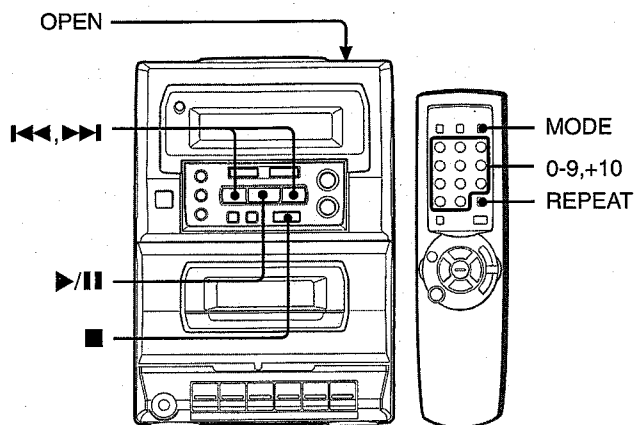

LOADING A DISC

Press the **OPEN** mark to open the disc compartment. Load a disc with the label side up and close the disc compartment.

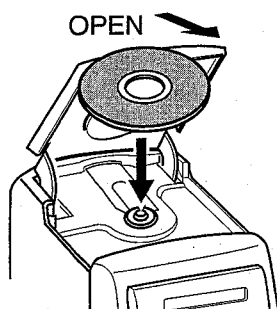


PLAYING A DISC

Load a disc.

Press the **▶/||** button on main unit or the **▶** button on remote control.

Play begins with the first track.

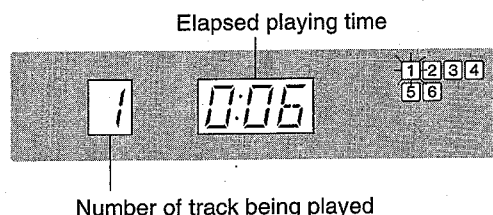


To **stop play**, press the **■** button.

To **pause play**, press the **▶/||** button on main unit or the **||** button on remote control. To resume play, press again.

To **search for a particular point during playback**, keep the **I<<** or **>>I** button pressed and release the button at the desired point.

To **skip to the beginning of a track during playback**, press the **I<<** or **>>I** button repeatedly.

Display in stop mode

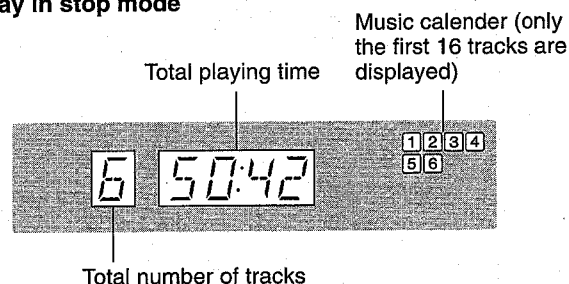

To start play when the power is off (Direct Play Function)

Press the **▶/||** button. The power is turned on and play of the loaded disc begins.

If other than CD play is selected with the power on, pressing the **▶/||** button once will change the function to CD and play starts.

To select a track with the remote control

Press the numbered buttons and the **+10** button to select a track. Example:

To select the 25th track, press the **+10**, **+10** and **5** buttons.

To select the 10th track, press the **+10** and **0** buttons.

The selected track starts to play and play continues to the end of that disc.

NOTE

- Do not use irregular shape CDs (example: heart-shaped, octagonal ones). It may result in malfunction.
- Do not place more than one compact disc in the disc compartment.
- Do not try to open the disc compartment during play.

RANDOM PLAY

All the tracks on the disc can be played randomly.

Press the **MODE** button on the remote control once in stop mode to display "RAN".

Press the **▶/||** button to start play.

To **cancel random play**, press the **MODE** button repeatedly in stop mode until "RAN" disappears.

NOTE

- It is not possible to skip to the previously played track with the **I<<** button. The unit returns to the beginning of the current track only.
- When you select a track with the numbered buttons on the remote control during the random play mode, the selected track starts to play and the random play mode is cancelled.
- During **RANDOM** play, "REPEAT 1" play cannot be performed.

REPEAT PLAY

One track, all the tracks or programmed tracks can be played repeatedly.

Press the REPEAT button on the remote control to display "REPEAT 1" or "REPEAT ALL".

To repeat the current track only, press to display "REPEAT 1".
To repeat all the tracks, press to display "REPEAT ALL".

To cancel repeat play, press the REPEAT button to turn off "REPEAT".


To repeat the desired tracks only, program the tracks and press the REPEAT button to display "REPEAT ALL".

NOTE

- RANDOM play can be performed during "REPEAT ALL" mode.
- If RANDOM mode is activated during "REPEAT 1" mode, the "REPEAT 1" mode will be cancelled and "REPEAT ALL" mode is selected instead.

PROGRAMMED PLAY

Up to 30 tracks can be programmed from the inserted disc.

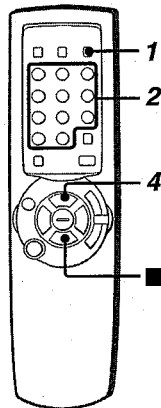

Use the remote control.

1 Press the MODE button twice in stop mode so that "M" flashes on the display.




2 Press the numbered buttons and +10 button to program track.

Example:

To select the 12th track, press the +10 and 2 buttons.

To select the 20th track, press the +10, +10 and 0 buttons.

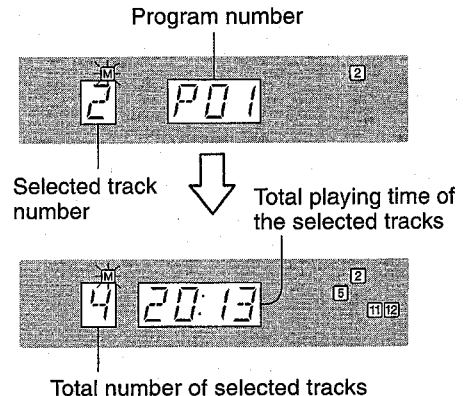

3 Repeat step 2 to program other tracks.

4 Press the ► button to start play.

To check the program

Each time the ►► button is pressed in stop mode, a track number and program number will be displayed.

To clear the program

Press the ■ button or the MODE button (on remote control) in stop mode.

To add tracks to the program

Before playing, repeat step 2. The track will be programmed after the last track.

To change the programmed tracks


Clear the program and repeat all the steps.

NOTE

- During programmed play, the following operations cannot be performed.
 - Random play
 - One-track repeat (REPEAT 1)
- If the programmed time is more than 99:59 minutes, or the disc track number 31 or above is programmed, the display shows -:- as the total playing time.

RECORDING

This section explains how to record from the tuner, CD player or other external equipment.

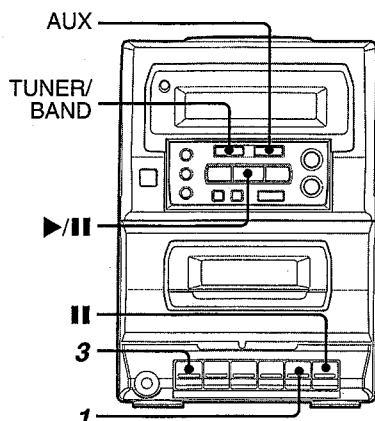

Preparation

- Wind up the tape to the point recording starts.
- Note that recording is done on only one side of the tape.
- Use only type I (normal) tapes.

1 Insert the tape to be recorded on into the deck.
Insert the tape with the side to be recorded on facing out from the unit and the exposed side down.

2 Get the source ready for recording.

To record from a CD, load the disc and press the ▶/|| button.

To record from a radio broadcast, press the TUNER/BAND button and tune in to a station.

To record from a connected source, press the AUX button and prepare the source for play.

3 Press the ● button to start recording.

The ▶ button is pressed simultaneously.

When the selected function is CD, playback and recording start simultaneously.

When the selected function is AUX, start playback manually.

To stop recording, press the ■/▲ button.

To pause recording, press the || button. To resume recording, press again.

When the tape reaches its end, the tape stops and the ● button is released. During CD recording, CD play pauses automatically. Change the tape and press the ● button, then CD play will automatically resume.


To record the selected tracks of the CD

Program the tracks (see "PROGRAMMED PLAY") and press the ● button.

NOTE

If squealing or beating sounds occur when recording an MW or LW broadcast, press the MODE button on the remote control to display "BEAT ON" or "BEAT OFF", so as to eliminate the noise.

SETTING THE CLOCK

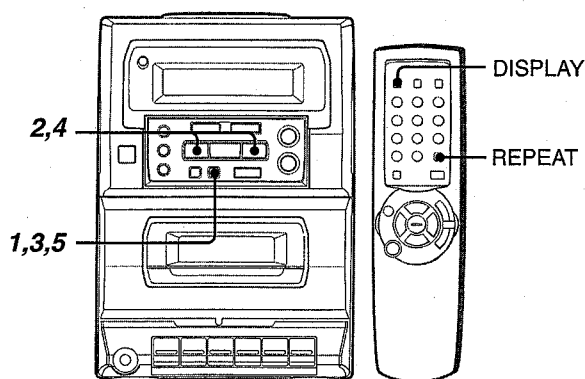

When the AC cord is connected for the first time, the time on the display flashes.

Set the time as follows while the power is off.

1 Press the SET button.

The hour flashes.



2 Press the ◀◀ or ▶▶ button to designate the hour.

3 Press the SET button to set the hour.

The hour stops flashing and the minute starts flashing.

4 Press the ◀◀ or ▶▶ button to designate the minute.

5 Press the SET button to set the minute and complete setting.

The minute stops flashing on the display and the clock starts from 00 seconds.

To correct the current time

Press the POWER button to turn the unit off and press the SET button. Then, carry out steps 1 to 5 above.

To display the current time

Press the DISPLAY button on the remote control once. The time is displayed for 4 seconds.

To switch to the 24-hour standard

Using the remote control while the power is on, press the DISPLAY button once so that the clock is displayed and then press the REPEAT button within 4 seconds.

Repeat the same procedure to restore the 12-hour standard.

If the clock display flashes while the power is off


This is caused by a power interruption. The current time needs to be reset.

If power is interrupted for more than approximately 24 hours, all settings stored in memory after purchase need to be reset.

COPYRIGHT

Please check the laws on copyright relating to recordings from discs, radio or external tape for the country in which the machine is being used.

SETTING THE TIMER

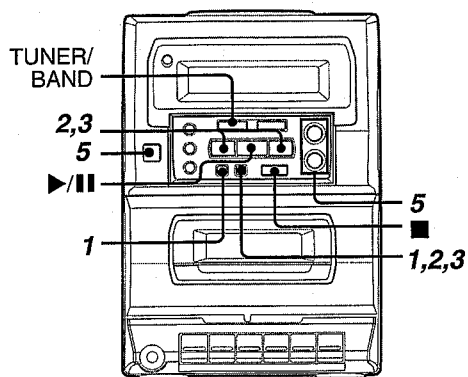

The unit can be turned on at a specified time with the built-in timer.

Preparation

Make sure the clock is set correctly.

- 1 Press the **TIMER/SLEEP** button once to display ☉, and press the **SET** button within 4 seconds.
☉ is displayed, and the hour flashes.



NOTE

If you do not press the SET button within 4 seconds, another operation may start.

- 2 Designate the hour of the timer-on time by pressing the **◀◀** or **▶▶** button, and press the **SET** button. Repeat to designate the minute of the timer-on time.
- 3 Select the duration for the timer-activated period with the **◀◀** or **▶▶** button and press the **SET** button.



The duration for the timer-activated period can be set between 5 and 240 minutes in 5-minute steps.

- 4 Prepare the source.

To listen to a CD, load the disc and press the **▶/||** button.
To listen to the radio, press the **TUNER/BAND** button and tune in to a station.

- 5 Press the **POWER** button to turn the unit off after adjusting the volume.

☉ remains on the display after the power is turned off (timer standby mode).

When the timer-on time is reached, the unit turns on and begins play with the selected source.

- You cannot set the volume level to 21 or higher.

To check the specified time

Press the **TIMER/SLEEP** button once. The timer-on time flashes for 4 seconds. However, the duration for the timer-activated period will not be displayed.

To cancel timer standby mode temporarily

Press the **TIMER/SLEEP** button twice to turn off ☉.

Using the unit while the timer is set


You can use the unit normally after setting the timer.

Before turning off the power, repeat step 4 to prepare the source, and adjust the volume.

NOTE

- Timer playback will not begin unless the power is turned off.
- Connected equipment cannot be turned on and off by the built-in timer of this unit. Use an external timer.

SETTING THE SLEEP TIMER

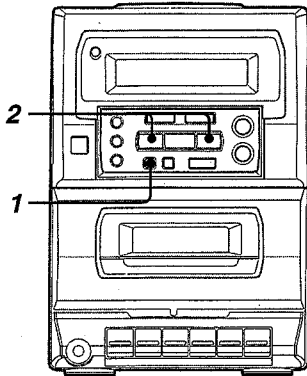

The unit can be turned off automatically at a specified time.


- 1 Press and hold the TIMER/SLEEP button until "SLEEP" appears on the display.**



- 2 Within 4 seconds, press the ◀◀ or ▶▶ button to specify the time until the power is turned off.**

Each time the button is pressed, the time changes between 5 and 240 minutes in 5-minute steps.

Specified time

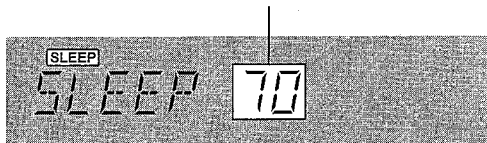

To check the time remaining until the power is turned off

Press and hold the TIMER/SLEEP button until the remaining time is shown. It will be displayed for 4 seconds.

To cancel the sleep timer


Press and hold the TIMER/SLEEP button until the remaining time is displayed, then press and hold the TIMER/SLEEP button again within 2 seconds so that "SLEEP" on the display disappears.

NOTE

If the unit is turned off during tape playback, the ▶ button is kept pressed. Press the ■/▲ button to release the ▶ button.

CONNECTING OPTIONAL EQUIPMENT

CONNECTING TO AUX JACKS

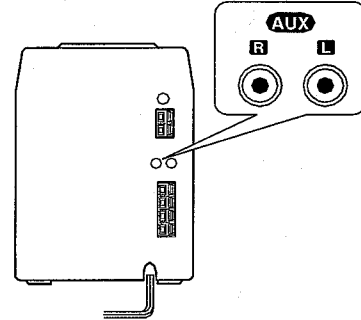

Sound signals can be input to this unit through the AUX jacks. Use a cable with RCA phono plugs to connect equipment (turntables, LD players with analog output jacks, DAT decks, MD players, VCRs, TVs, etc.).

Connect the red plug to the R jack, and the white plug to the L jack.


Refer to the operating instructions of the connected equipment for details.

- The connecting cords are not supplied. Obtain the necessary connecting cords.
- Consult your local Aiwa dealer for recommended equipment.

When connecting a turntable

Use an Aiwa turntable equipped with a built-in equalizer amplifier.

LISTENING TO EXTERNAL SOURCES

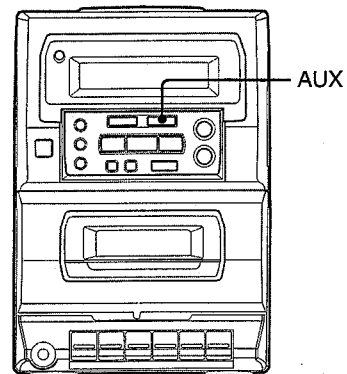

To play equipment connected to the AUX jacks, press the AUX button and start play. "AUX" appears on the display.

CARE AND MAINTENANCE

Occasional care and maintenance of the unit and the software are needed to optimize the performance of your unit.

To clean the cabinet


Use a soft and dry cloth.

If the surfaces are extremely dirty, use a soft cloth lightly moistened with mild detergent solution. Do not use strong solvents, such as alcohol, benzine or thinner as these could damage the finish of the unit.

To clean the heads and tape paths

After every 10 hours of use, clean the heads and tape paths with a head cleaning cassette or cotton swab moistened with cleaning fluid or denatured alcohol. (These cleaning kits are commercially available.)


When cleaning with a cotton swab, wipe the recording/playback head, erasure head, capstan, and pinchroller.

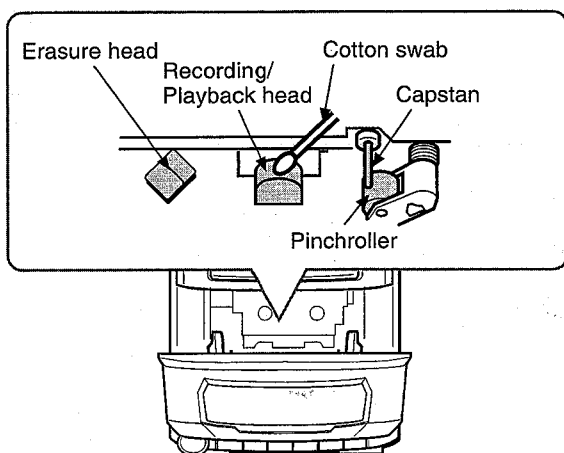

After cleaning the heads and tape paths with a head cleaning cassette or a moistened swab, wait until the cleaned parts are completely dry before inserting the tapes.

Care of discs

- When a disc becomes dirty, wipe the disc from the center out with a cleaning cloth.

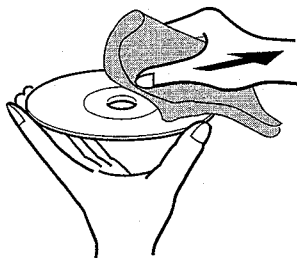

- After playing a disc, store the disc in its case. Do not leave the disc in places that are hot or humid.

Care of tapes

- Store tapes in their cases after use.
- Do not leave tapes near magnets, motors, television sets, or any source of magnetism. This will downgrade the sound quality and cause noise.
- Do not expose tapes to direct sunlight, or leave them in a car parked in direct sunlight.

SPECIFICATIONS

Main unit

FM tuner section

Tuning range
Antenna terminals

87.5 MHz to 108 MHz
75 ohms (unbalanced)

MW tuner section

Tuning range

531 kHz to 1602 kHz (9 kHz step)
530 kHz to 1710 kHz (10 kHz step)

Antenna

Loop antenna

LW tuner section

Tuning range
Usable sensitivity
Antenna

144 kHz to 290 kHz
1400 μ V/m
Loop antenna

Amplifier section

Power output

Rated: 4.0 W + 4.0 W (4 ohms,
T.H.D. 1 %, 1 kHz/DIN 45500)
Reference: 5 W + 5 W (4 ohms,
T.H.D. 10 %, 1 kHz/DIN 45324)

Cassette deck section

Track format
Frequency response
Recording system
Erasure system
Heads

4 tracks, 2 channels stereo
Normal tape: 50 Hz – 10000 Hz
AC bias
Magnet erase
Recording/playback head \times 1
Erase head \times 1

Compact disc player section

Laser
D-A converter
Wow and flutter

Semiconductor laser ($\lambda = 780$ nm)
1 bit dual
Unmeasurable

Speaker system

Speakers
Dimensions (W \times H \times D)
Weight

100 mm cone type, 4 ohms
150 \times 232.5 \times 207 mm
1.2 kg

General

Power requirements
Power consumption
Dimensions of main unit (W \times H \times D)
Weight of main unit

230V AC, 50 Hz
30 W
160 \times 236.5 \times 218 mm
2.5 kg

Specifications and external appearance are subject to change without notice.

TROUBLESHOOTING GUIDE

If the unit fails to perform as described in these Operating Instructions, check the following guide.

GENERAL

There is no sound.

- Is the AC cord connected properly?
- Is there a bad connection? (→ page 3)
- Was an incorrect function button pressed?

The sound becomes inaudible.

- There may be a short circuit in the speaker terminals.
 - Disconnect the AC cord from the AC outlet and re-connect the speaker cords correctly. Then connect the AC cord and turn the unit on again.

Sound is emitted from one speaker only.

- Is the other speaker disconnected?

TUNER SECTION

There is constant, wave-like static.

- Is the antenna connected properly? (→ page 3)

The reception contains noise interferences or the sound is distorted.

- Is the system picking up external noise or multipath distortion?
 - Change the orientation of the antenna.
 - Move the unit away from other electrical appliances.

CASSETTE DECK SECTION

The tape does not run.


- Is the deck in pause mode? (→ page 6)

The sound is off-balance or not adequately high.

- Is the playback head dirty? (→ page 12)

Recording is not possible.

- If the tab on a cassette broken off, cover the hole with adhesive tape.

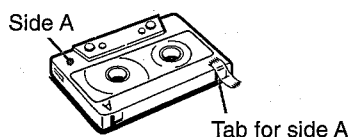

- Is the recording head dirty? (→ page 12)

Erasure is not possible.

- Is the erasure head dirty? (→ page 12)
- Is a CrO₂ or metal tape being used?

High frequency sound is not emitted.

- Is the recording/playback head dirty? (→ page 12)

CD PLAYER SECTION

The CD player does not play.

- Is the disc correctly loaded? (→ page 7)
- Is the disc dirty? (→ page 12)
- Is the lens affected by condensation?
 - Wait approximately one hour and try again.

CLOCK AND TIMER SECTION

Timer setting is not possible.

- Does the clock flash on the display?
 - Reset the clock. (→ page 9)

PARTS INDEX

The parts on the main unit and remote control are listed in alphabetical order with the pages on the right side. Refer to each page for instructions about each part.

AUX	11
BAND	5
►/ CLEAR	6, 7
DISPLAY	5, 9
EQ	5
►► F FWD	6
FUNCTION	5
MODE	5, 7, 8, 9
OPEN	7
PAUSE	9
PHONES	5
► PLAY	9
POWER	5, 13
■ PRESET (STOP)	6, 7, 13
● REC	9
REPEAT	8, 9
◀◀ REW	6
SET	6, 9, 10
■/▲ STOP/EJECT	9
TIMER/SLEEP	10, 11
TUNER/BAND	5
◀◀, ►► TUNING DOWN, UP (SKIP/SEARCH)	5, 7, 9, 10
VOLUME	5
0-9, +10	6, 7, 8
3-MODE GEQ	5

To reset

If an unusual condition occurs in the display window or the cassette decks, reset the unit as follow.

- 1 Press the POWER button to turn off the power.
- 2 While pressing the ■ button, press the POWER button.

Everything stored in memory after purchase is canceled.

If the power cannot be turned off in step 1 because of a malfunction, reset by disconnecting the AC cord and repeat step 2.